

For vehicles with a navigation system, refer to the “Navigation System Owner’s Manual” for information regarding the equipment listed below.

- Navigation system
 - Air conditioning controls
 - Windshield wiper de-icer
 - Rear view monitor system
- Intuitive parking assist
 - Audio/video system
 - Rear window and outside rear view mirror defogging

1

Before driving

1-1. Key information

Keys 30

1-2. Opening, closing and locking the doors

Smart access system with push-button start 35

Wireless remote control 48

Side doors 52

Back door 55

1-3. Adjustable components (seats, mirrors, steering wheel)

Front seats 67

Rear seats 71

Driving position memory 75

Head restraints 80

Seat belts 82

Steering wheel 90

Anti-glare inside rear view mirror 92

Outside rear view mirrors 94

1-4. Opening and closing the windows and moon roof

Power windows 97

Moon roof 100

1-5. Refueling

Opening the fuel tank cap 104

1-6. Theft deterrent system

Engine immobilizer system 108

Alarm 110

Theft prevention labels (for U.S.A.) 113

1-7. Safety information

Correct driving posture 114

SRS airbags 116

Front passenger occupant classification system 129

Child restraint systems 134

Installing child restraints 138

2 When driving

2-1. Driving procedures

Driving the vehicle.....	150
Engine (ignition) switch	159
Automatic transmission.....	165
Turn signal lever	169
Parking brake	171
Horn.....	172

2-2. Instrument cluster

Gauges and meters	173
Indicators and warning lights.....	175
Multi-information display	180
Head-up display	186

2-3. Operating the lights and windshield wipers

Headlight switch.....	191
Automatic High Beam	197
Fog light switch	204
Windshield wipers and washer.....	207
Rear window wiper and washer.....	214
Headlight cleaner switch	216

2-4. Using other driving systems

Cruise control	217
Dynamic radar cruise control.....	222
Intuitive parking assist	235
Rear view monitor system (rear view mirror-attached type).....	242
Driving assist systems.....	246
All-wheel drive lock switch (AWD models)	252
Hill-start assist control	253
Pre-Collision System.....	255

2-5. Driving information

Utility vehicle precautions	260
Cargo and luggage	264
Vehicle load limits.....	268
Winter driving tips	269
Trailer towing.....	273
Dinghy towing	291

3 Interior features

3-1. Using the air conditioning system and defogger

Automatic air conditioning system	294
Rear window defogger switch.....	301
Windshield wiper de-icer	302

3-2. Using the audio system

Audio system	303
Using the radio.....	307
Using the CD player.....	317
Playing MP3 and WMA discs.....	327
Operating an iPod.....	337
Operating a USB memory.....	345
Optimal use of the audio system.....	354
Using the AUX port.....	357
Using the steering wheel audio switches	359

3-3. Using the Bluetooth® audio system

Bluetooth® audio system	362
Using the Bluetooth® audio system	365
Operating a Bluetooth® enabled portable player	370
Setting up a Bluetooth® enabled portable player	374
Bluetooth® audio system setup	381

3-4. Using the hands-free phone system (for mobile phones)

Hands-free system for mobile phones.....	382
Using the hands-free system (for mobile phones).....	386
Making a phone call.....	394
Setting a mobile phone.....	399
Security and system setup.....	405
Using the phone book.....	409

3-5. Using the interior lights

Interior lights list.....	416
• Interior lights	417
• Personal lights	417

3-6. Using the storage features

List of storage features.....	419
• Glove box	420
• Bottle holders/ door pockets	421
• Cup holders.....	422
• Console box.....	424
• Auxiliary boxes.....	426
• Under tray.....	427

3-7. Other interior features

Sun visors.....	428
Vanity mirrors.....	429
Clock.....	430
Outside temperature display	431
Multi-display light control (vehicles without a navigation system)	432
Power outlets.....	433
Seat heaters and ventilators.....	436
Armrest	438
Coat hooks	439
Floor mat.....	440
Luggage compartment features.....	441
Garage door opener.....	446
Compass.....	452
Safety Connect	456

4 Maintenance and care

4-1. Maintenance and care

Cleaning and protecting the vehicle exterior.....	464
Cleaning and protecting the vehicle interior	468

4-2. Maintenance

Maintenance requirements	471
General maintenance.....	473
Emission inspection and maintenance (I/M) programs	477

4-3. Do-it-yourself maintenance

Do-it-yourself service precautions.....	478
Hood	481
Positioning a floor jack.....	482
Engine compartment.....	484
Tires	499
Tire inflation pressure.....	508
Wheels	512
Air conditioning filter.....	514
Electronic key battery	517
Checking and replacing fuses.....	519
Headlight aim (discharge headlights)	530
Light bulbs.....	532

5 When trouble arises

5-1. Essential information

Emergency flashers.....	546
If your vehicle needs to be towed	547
If you think something is wrong	555
Fuel pump shut off system	556

5-2. Steps to take in an emergency

If a warning light turns on or a warning buzzer sounds... ..	557
If a warning message is displayed.....	568
If you have a flat tire.....	587
If the engine will not start	601
If the shift lever cannot be shifted from P	603
If you lose your keys	604
If the electronic key does not operate properly	605
If the battery is discharged	608
If your vehicle overheats	611
If the vehicle becomes stuck	614
If your vehicle has to be stopped in an emergency.....	615

6 Vehicle specifications

6-1. Specifications

Maintenance data (fuel, oil level, etc.).....	618
Fuel information.....	630
Tire information.....	633

6-2. Customization

Customizable features.....	645
----------------------------	-----

6-3. Initialization

Items to initialize	654
---------------------------	-----

7 For owners

Reporting safety defects for U.S. owners.....	656
Seat belt instructions for Canadian owners (in French).....	657
SRS airbag instructions for Canadian owners (in French).....	660

Index

Abbreviation list 672

Alphabetical index..... 674

What to do if... 689

1

2

3

4

5

6

7